


Fitting Instructions

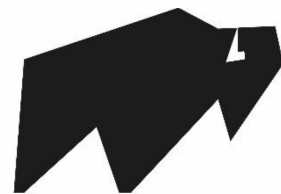

BUFFALO[™]
FLOOD SYSTEMS

Air Brick Protector

Tools and fixings required:

Drill. Masonry drill bit. Spirit level.
High adhesive exterior silicone sealant.
8no. masonry wall plugs.
8no. screws.

To install the cover:

Position over the frame with the tabs pointing upwards and snap together top and bottom.

To remove the cover:

Release the tabs and lift away from the frame.

